

SIERRA DESIGNS

NOMAD 4.1



Your Sierra Designs NOMAD 4.1 tent is very easy to pitch and maintain. Follow these instructions to pitch your tent quickly, safely and easily.

NOMAD 4.1 TENT CONTENTS

Tent Body & Rainfly:	1	Pitching Instructions:	1
Tent Poles:	3	Stake Sack:	1
Tent Stakes:	9*	Pole Sack:	1
Guy Cord:	4		

** Sierra Designs tents include stakes for pitching the body and fly under normal conditions. Additional stakes may be required in severe conditions.*

First Pitch

In order to familiarize yourself with your new tent, we suggest that you "test pitch" it before embarking on a wilderness trip.

Select a Site

Look for a level spot that is protected from the wind in order to ensure sleeping comfort. Clear the area of debris such as sharp stones and sticks which might abrade or puncture the tent floor. Choose an area that will drain well when it rains.

Unfurl the Tent and Assemble the Poles

Unfurl the tent and lay the tent floor flat on the ground with the door unzipped. Carefully unfold the shock corded pole sections and allow them to slide together. Do not allow the poles to snap together: This can lead to serious pole damage. Make certain that the insert of each pole section is fully inserted into the next pole section (Figure 1). You will have three poles of equal length.

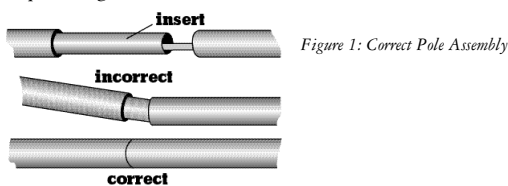


Figure 1: Correct Pole Assembly

Stake Out the Tent Floor

The *Nomad 4.1* is a freestanding tent. Staking out the floor is not necessary in order to pitch it. However, we recommend that you stake down the tent after it is pitched for greater stability in high winds.

Erect the Tent

Insert one pole into the pole sleeve which runs from point A to point E (Figure 2). Insert another pole into the pole sleeve running from B to D. Insert the metal tips of the pole ends into their respective grommets at points A and B. Then, from the opposite end of the tent push the poles into the pole sleeves, one at a time, making them flex into an even curve, until you can insert the other ends of the poles into the grommets at points D and E. Next, insert the metal tips of the remaining pole into the grommets at points C and F. Locate the Swift Clip™ at the apex of the tent, along the C-F axis, and attach it to the C-F pole. Following the seam along the path of the pole, attach the remaining Swift Clips to the pole.

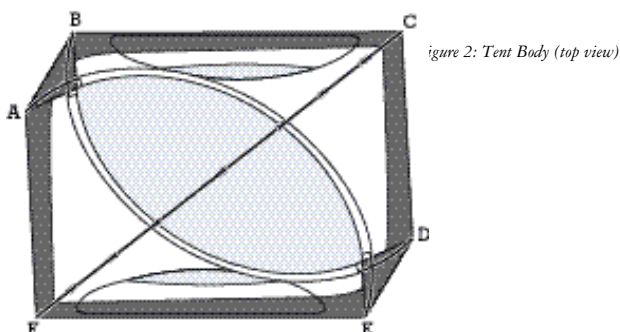


Figure 2: Tent Body (top view)



Flysheet

Drape the fly over the tent and position the vestibule zippers over the front and back door (Figure 3). Attach the fly to the tent poles via Velcro® attachments located underneath the fly at points L, M, N and O. At each pole end (points A, B, C, D, E and F) there are 1" side-release "fly clip" buckles. Clip these buckles into their corresponding mates on the tent floor and pull the straps until the fly is taut (Figure 4). By first clipping the blue webbing strap on the rainfly to a blue webbing strap on the body, you are guaranteed a fast, proper rainfly set-up every time. Stake out the fly vestibule away from the tent body at points G and H. We recommend you stake out points I, J, and K for maximum ventilation. The tent may be guyed out from points L, M, N and O for maximum stability in high winds.

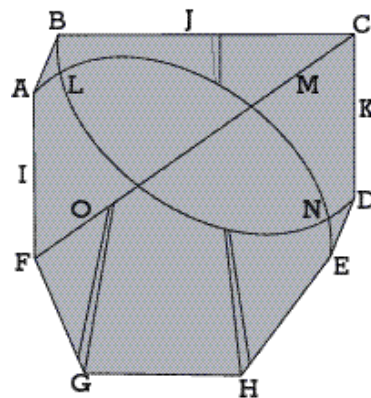


Figure 3: Flysheet (top view)

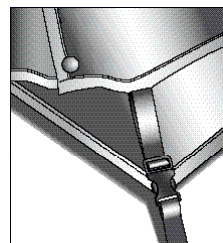


Figure 4: Fly Clip

Ventilation

Besides staking and guying out all points listed above, optimal airflow through the tent itself can be obtained by leaving part of the double-zippered vestibule open or by rolling up the sides of the rain fly.

Rain Fly

The full-coverage can be changed into a partial-coverage fly for increased ventilation. To do this, unclip the fly from the "fly-clip" buckles and begin rolling the fly up. Once you have gotten to about 1/3 rd of the way up the tent wall, attach the buckles to the buckles on the tent body near points L, M, N and O.

Vestibule

The vestibule can be pitched in a variety of configurations to address different weather, storage, ventilation, or wind conditions. The vestibule door may be folded back on itself on the inside and attached by the 3/4" side release buckles to form a half or one third door. The entire door may be guyed out from points G and H to form a large awning, or it may be folded in half to form a small awning. Or, the vestibule door may be rolled entirely out of the way, forming an unobstructed yet protected entrance.