

## ANTARES



**SIERRA  
DESIGNS**

**Your Sierra Designs  
ANTARES tent is very  
easy to pitch and maintain.  
Follow these instructions to  
pitch your tent quickly, safely  
and easily.**

### ANTARES TENT CONTENTS

Tent Body and Rainfly:	1	Portable Attic:	1
Tent Poles:	3	Footprint:	1
Tent Stakes:	8*	Coffee Sling:	2
Guy Cords:	4	Pitching Instructions:	1

\* Sierra Designs tent s include stakes for pitching the body and fly under normal conditions. Additional stakes may be required in severe conditions.

#### First Pitch

In order to familiarize yourself with your new tent, we suggest that you "test pitch" it before embarking on a wilderness trip.

#### Select a Site

Look for a level spot that is protected from the wind in order to ensure sleeping comfort. Clear the area of debris such as sharp stones and sticks which might abrade or puncture the tent floor. Choose an area that will drain well when it rains.

#### Unfurl the Tent and Assemble the Poles

Unfurl the tent and lay the tent floor flat on the ground with the doors unzipped. Carefully unfold the shock corded pole sections and allow them to slide together. Do not allow the poles to snap together: This can lead to serious pole damage. Make certain that the insert of each pole section is fully inserted into the next pole section (Figure 1). You will have two straight poles of equal length and one shorter pole.

#### Stake Out the Tent Floor

Although the *Antares* is a completely freestanding tent, we suggest that you always stake out the floor for greater safety and stability, especially in high winds. First stake the webbing loops at corners A and B (Figure 2). Then move to the opposite end of the tent, pulling the webbing loops at corners C and D until the tent is squarely and tautly positioned, and stake down. Staking points E and F is optional.



#### Erect the Tent

Insert the metal tips of one of the two long poles into the grommets at points A and D, and the tips of the other into the grommets at points B and C. Pull the two poles up so they intersect at the center of the tent. Next, position yourself in the open doorway and hook the Clip-Loc™ (Figure 3) over the widest angle of this intersection (do not attach the bungee cord yet). Following the tent seams between points A and D, and B and C attach all of the Swift Clips™ to their corresponding tent poles. Now attach the bungee cord on the Clip-Loc a at the apex of the tent by wrapping the bungee in the direction crossing the open gate of the clip. Wrap the cord around the pole intersection two to four times, depending on desired firmness, then slide the cord into the groove on the backside of the clip to hold it taut (Figure 3). Now, connect the ends of the remaining short pole to the S-Stopper w/ H-clip (Figure 6) at points G and H for proper set up and coverage

#### Fly Sheet

Making sure that the zippers are in front of the doors, drape the fly over the tent. At the corners of the fly, points A, B, C, and D, are 3/4" side-release "Fly Clip" buckles (Figure 5). Clip these buckles into their corresponding mates at points A, B, C, and D on the tent floor (Figure 2). By first clipping the blue webbing strap on the rainfly to a blue webbing strap on the body, you are guaranteed a fast, proper rainfly set-up every time. Adjust the buckles to the desired fit (Figure 4). Stake out the adjustable loops at points I, J, K, and L. For increased stability and strength in high winds, points M, N, O and P can be guyed out.

Figure 1: Correct Pole Assembly

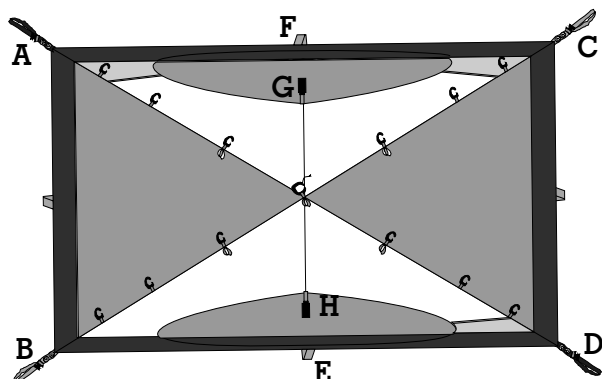
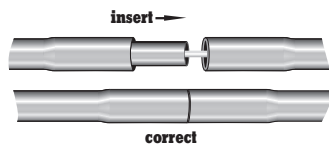


Figure 2: Tent Body (top view)

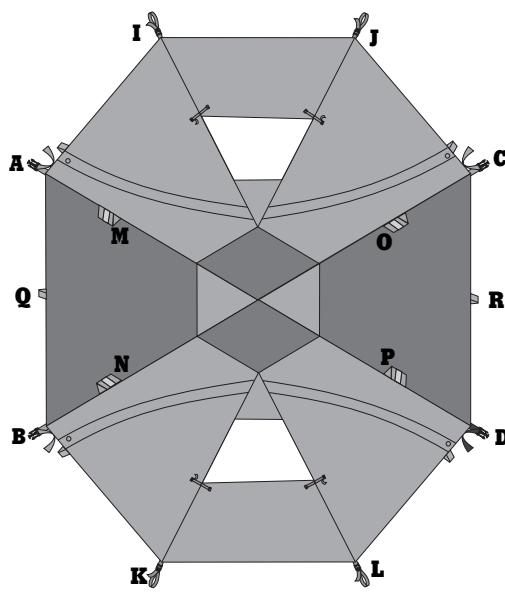


Figure 4: Tent Fly (top view)

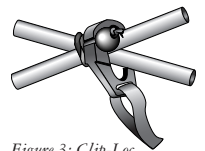


Figure 3: Clip-Loc

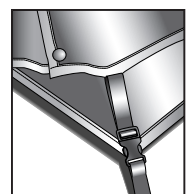


Figure 5: Fly Clip

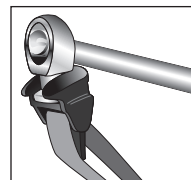


Figure 6: S-Stopper w/H-clip