

Sierra Designs Moken 4 & 6 Mesh Room Installation

To facilitate the speedy installation of your Sierra Designs Moken Mesh Room, be sure that the tent is properly pitched and all internal mesh room attachment points are visible. (To guarantee a proper pitch, please read the tent pitching instructions provided inside your Sierra Designs Moken 4 or 6 carry bag.)

First, connect the mesh rooms center white toggle to the inside center loop of the tent body. Next, move to one of the main doors and connect the two white toggles to their corresponding tent body loops on both sides of the main tent door and repeat this step for the other door way.

Now that the center of the mesh room is attached, unzip one of the mesh room doors and get inside. Once inside, pick a sleeping room and unzip the mesh room's door and connect all the mesh rooms black toggles to their corresponding black rings that run along the frame of the sleeping rooms and repeat this process for the other side to ensure proper internal mesh room installation.

Lastly, locate the bottom corner mesh room attachments straps and affix each straps metal grommet to the bottom of the main tent poles located near the outside of the main tent doors. Adjust to straps to desired tautness and enjoy some bug free camping.

