

Zeta 4-Pitching Instructions



In order to familiarize yourself with your new tent, we recommend you "test pitch" before embarking on your wilderness adventure. For more helpful tips, go to www.sierradesigns.com/tents.html



Package Includes: Tent Body, Rain Fly, 2 Poles, 4 Guy Cords, 9 Tents Stakes, 1 Pole Sack & 1 Stake Sack.



Step 1: Find an even piece of ground, lay out and stake your tent (door with gray is front), assemble the poles. For a quick pitch, be sure the gray antenna poles are pointing toward the gray door. Place rear silver pole on top of main pole.




Step 2: Insert the pole end Ball Connectors™ on the hubbed pole set into the tents front and back Jake's Foot™ attachments. Insert pole end Ball Connectors™ of rear hoop pole into the side Jake's Foot™ attachments and snap into C clip at pole cross over point .



Jake's Foot™



Swivel C Hub™

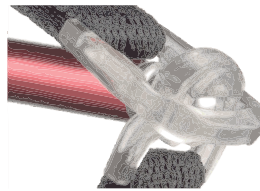

Ball Cap™ with SQ Ring™



Jake's Foot™ Fly Attachment



Step 3: Connect the antenna poles to their corresponding Ball Cap™ Connector located over the gray door. Then, working your way around the tent attach the remaining clips and H-Clips™ to the tent poles.



Step 4: Drape fly over tent body, note- gray vestibule is front. Attach black SQ Ring™ (underside of fly at front vestibule top) to Ball Cap on antenna poles. Attach the rain fly to each Jake's Foot™ using the clip on the fly. Stake out the vestibules and guy out as needed.