

Origami 3- Pitching Instructions

In order to familiarize yourself with your new tent, we recommend you "test pitch" it before embarking on your wilderness adventure. For more helpful tips, go to www.sierradesigns.com/tents.html



Origami 3 with floor
(sold separate)

Package Includes: Tent Body, 1 pole, 7 ground stakes, 1 pole bag with stake pocket.



Step 1: Find an even piece of ground, stake out three of the back (not door) stake loops.



Step 2: Insert pole with rounded end in top of tent. Stake out last two stake loops and adjust as needed.



Origami 3 without
optional floor



Origami floor, sold
separately



Origami 3 with
optional floor