

SIERRA DESIGNS

SIRIUS 2



Your Sierra Designs SIRIUS 2 tent is very easy to pitch and maintain. Follow these instructions to pitch your tent quickly, safely and easily.



SIRIUS 2 TENT CONTENTS

Tent Body and Rainfly:	1	Line Tighteners:	4
Tent Poles:	1	Pitching Instructions:	1
Tent Stakes:	6*	Pole Sack:	1
Guy Cord:	4		

* Sierra Designs tents include stakes for pitching the body and fly under normal conditions. Additional stakes may be required in severe conditions.

First Pitch

In order to familiarize yourself with your new tent, we suggest that you “test pitch” it before embarking on a wilderness trip.

Select a Site

Look for a level spot that is protected from the wind in order to ensure sleeping comfort. Clear the area of debris such as sharp stones and sticks which might abrade or puncture the tent floor. Choose an area that will drain well when it rains.

Unfurl the Tent and Assemble the Poles

Unfurl the tent and lay the tent floor flat on the ground with the door unzipped. Carefully unfold the shock corded pole sections and allow them to slide together. Do not allow the poles to snap together: This can lead to serious pole damage. Make certain that the insert of each pole section is fully inserted into the next pole section (Figure 1). You will have one main pole where all sections are connected by the Sierra Designs Quick Pitch Swivel Hub w/ H-clip (Figure 2).

Stake Out the Tent Floor

Although the *Sirius 2* is a completely freestanding tent, we suggest that you always stake out the floor for greater safety and stability, especially in high winds. First stake down the webbing loops at the back of the tent at points E and F (Figure 4). Then move to the front of the tent and pull the webbing loops at points A and B until the floor is square and

semitaught and stake them down. Staking out points C and D is recommended in especially high winds.

Erect the Tent

The pole should be laid out parallel to the length of the tent, A-E axis. Rotate the poles so that the tips of the poles are separated (Figure 3). Insert the tips of the poles into the grommets at points E and F. Move to the other side of the tent and grab each pole end and insert the tips into the grommets at points A and B. Starting at Point G clip all of the swift clips to the poles along the A – F and B – E axis

Fly Sheet

At points E, F, J, and I are side-release “fly clip” buckles (Figure 6). Drape the fly sheet over the tent so the orange “fly clip” attachment on the rainfly at point J is aligned with the orange “fly clip” attachment at point P on the tent body. By clipping the orange webbing strap on the rainfly to the orange webbing strap on the body, you are guaranteed a fast, proper, rainfly setup every time. Attach the fly to the tent poles via Velcro® located at points I, J, L, and M. Clip the remaining “fly clip” buckles at points E, F, and I and pull the straps at points E and F until the fly is taught (Figure 5). Now pull point H out until the rainfly is taught and stake to the ground. Do the same with point K. You can use a guy line to guy out the fly at points L, M, and N for increased stability and ventilation.

The long Velcro straps located at points I and J are to allow you to roll back your rainfly by unclipping points E and F to give you maximum ventilation and night sky viewing.

Ventilation

With the rainfly on, several things can be done to increase airflow. The best airflow through the tent is obtained by pitching the tent with points A and B into the wind, with points L, M, and N guyed out. (In heavy winds it is suggested to pitch tent with points E and F facing into the wind).

Figure 1: Correct Pole Assembly

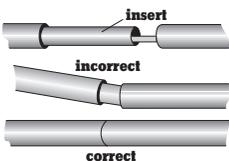


Figure 2: Quick Pitch Swivel Hub w/ H-clip (side view)

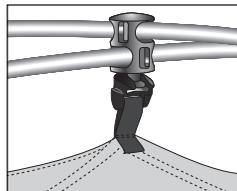


Figure 3: Quick Pitch Swivel Hub w/ H-clip (top view)

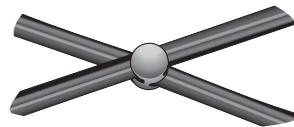


Figure 4: Tent Body (top view)

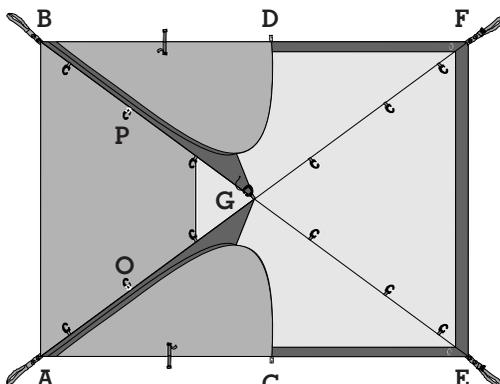


Figure 5: Tent Fly (top view)

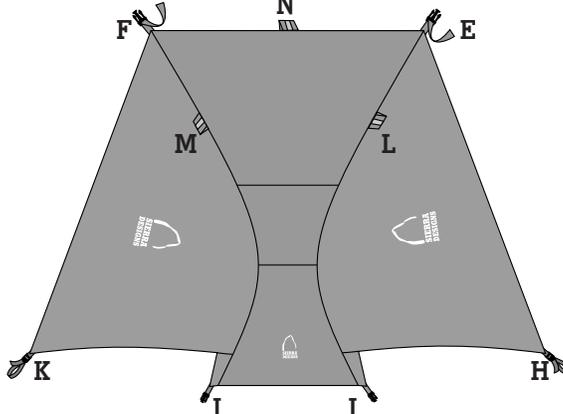


Figure 6: Fly Clip

